

TARIFA

TASK CHAIRS



Specifications

Seat	Multilayer
Backrest	Reinforced polypropylene lined with polyester mesh on item 140/1
Headrest	Reinforced polypropylene, height-adjustable
Lumbar support	Height adjustable
Padding	Shape-retaining polyurethane foam 5/2 cm thick, density 30 rc
Armrests	Black or white polypropylene BR 144 height-adjustable BR 527 3/D height-adjustable, rotating and sliding black TPU pad
Mechanism	Self-adjusting multiblock synchro with shock-proof system. Seat slider on TR version
Height adjustment	Gas pump (UNI 9084 certified)
Castors	ø 65 polyamide (AR4)
Swivel base	Black nylon (B36) White nylon (B35)



Components and/or modules

Image	Dimension		Code	Description
	H	123-131	P142D	Task chair with height-adjustable headrest, self-adjusting synchro, black base and outer shell
	L	51		
	P	70		
	H	123-131	P142DTR	Task chair with height-adjustable headrest, multi block synchro and seat slider, black base and outer shell
	L	51		
	P	70		
	H	105-113	P143D	Task chair with self-adjusting synchro, black base and outer shell
	L	51		
	P	70		
	H	105-113	P143DTR	Task chair with multi-block synchro and seat slider, black base and outer shell
	L	51		
	P	70		
	H	123-131	P140D	Task chair mesh backrest with height-adjustable headrest, self-adjusting synchro, black base and outer shell
	L	51		
	P	70		
	H	123-131	P140DTR	Task chair mesh backrest with height-adjustable headrest, multi block synchro and seat slider, black base and outer shell
	L	51		
	P	70		

Image	Dimension		Code	Description
	H	105-113	P141D	Task chair, mesh backrest, self-adjusting multi block synchro, black base and outer shell
	L	51		
	P	70		
	H	105-113	P141DTR	Task chair mesh backrest, multi block synchro and seat slider, black base and outer shell
	L	51		
	P	70		
			BRN144	Pair of height-adjustable, black polypropylene armrests
			BRN527	Pair of height-adjustable armrests with rotating and sliding black TPU pad
	H	123-131	B142D	Task chair with height-adjustable headrest, self-adjusting multi block synchro, white base and outer shell
	L	51		
	P	70		
	H	123-131	B142DTR	Task chair with height-adjustable headrest, multi block synchro and seat slider, white base and outer shell
	L	51		
	P	70		
	H	105-113	B143D	Task chair with self-adjusting multi block synchro, white base and outer shell
	L	51		
	P	70		


Image	Dimension		Code	Description
	H	105-113	B143DTR	Task chair with multi block synchro and seat slider, white base and outer shell
	L	51		
	P	70		
	H	123-131	B140D	Task chair mesh backrest with height-adjustable headrest, self-adjusting multi block synchro, white base and outer shell
	L	51		
	P	70		
	H	123-131	B140DTR	Task chair mesh backrest with height-adjustable headrest, multi block synchro and seat slider, white base and outer shell
	L	51		
	P	70		
	H	105-113	B141D	Task chair mesh backrest, self-adjusting multi block synchro, white base and outer shell
	L	51		
	P	70		
	H	105-113	B141DTR	Task chair mesh backrest, multi block synchro and seat slider, white base and outer shell
	L	51		
	P	70		
			BRB144	Pair of height-adjustable, white polypropylene armrests
			BRB527	Pair of height-adjustable white polypropylene armrests with rotating and sliding black TPU pad

Mesh


Composition: 100% polyester. Martindale: 25,000 cycles




M2

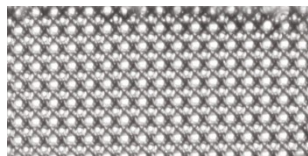

M3

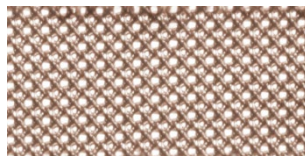




M4

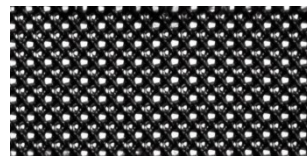

M10



Coverings

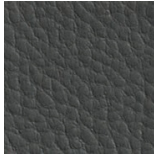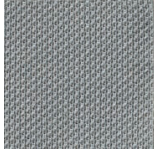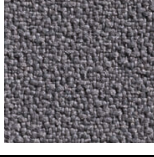Cat.	Covering	Description	Certifications	Folder Colors
1		Madrid 5 colors Weight: ± 230 g/sqm Composition: 100% PP polypropylene F.R. Martindale: 80,000 cycles	  Fire proof class 1IM	
1		Cove 5 colors Weight: ± 565 g/sqm Composition: 82% PVC – 7% Cotton – 11% Polyester Martindale: 50,000 cycles		
2		Angel 13 colors Weight: ± 228 g/sqm Composition: 100% polypropylene F.R. Martindale: 100,000 cycles		
2		One 15 colors Weight: ± 350 g/sqm Composition: 100% recycled polyester Martindale: 100,000 cycles	  	
2		Gazebo 15 colours Weight: ± 640 g/sqm Composition: 87.5% Plasticized Polyvinyl Chloride – 4.4% Cotton- 8.1% Polyester Martindale: 50,000 cycles		
2		King-flex 15 colours Weight: ± 300 g/sqm Composition: 100% polyester Trevira CS Martindale: 100,000 cycles	   	

Certifications



Ministerial Homologation Class 1IM on request. Search for FSC® products



<https://www.arte-d.it/magic/tarifa/>

INSTRUCTIONS FOR USE AND MAINTENANCE

GENERAL INFORMATION

If the chair is used as a Computer station, the angles between the foot and calf, calf and thigh, thigh and back, forearm and shoulder must be approximately 90°

GAS PUMP

Instructions for use: The height adjustment of the seat by gas pump is obtained by pulling the lever of the mechanism upwards. Maintenance instructions: the pump does not require any particular maintenance but it is advisable to avoid direct contact with the sliding parts as they contain lubricant. Warnings: Do not open the gas column by force. Specialized staff only can replace or repair the gas pump.

MECHANISMS

Instructions for use: All anti-shock mechanisms have a safety system which, once unlocked, is activated with a slight backward movement of the backrest, to prevent it from returning abruptly and accidentally forward.

Care instructions: It is recommended to clean the mechanism periodically to prevent dust or other indoor pollutants from affecting its operation or causing squeaking.

Warnings: All mechanism adjustments (height, side shift, seat and backrest adjustment, swivel) must be operated while seated to avoid improperly straining the mechanism. When adjusting, be careful to avoid any risk of entrapment or crushing of the fingers.

PADDED PARTS

Care instructions:

Leatherette: Clean with a damp cloth, mild soap and rinse well with water. It is imperative to avoid using solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product. In general, light-coloured materials cannot be put in contact with clothes containing unfixed dyes (e.g. jeans and derivatives) in order to avoid stains or streaks that are difficult to remove.

Fabric: Clean using a damp sponge by moistening the fabric without getting it wet. The use of a suction brush is not recommended, as traces of shampooing may remain on the upholstery, which would change the fire behaviour of the fabric. Gently dab from the edges to the centre of

the stain, do not rub. After stain removal, it is necessary to proceed with a complete drying of the fabric, avoiding subjecting it to high temperatures. The use of solvents, bleaches or other chemical detergents should be strictly avoided, as they could alter the aesthetic and physical characteristics of the product.

Leather: Clean regularly with a soft, dry cloth. Any stains can be removed using a cloth dampened with water and neutral soap by making regular circular movements. Dry gently after treatment. Gently dab from the edges to the centre of the stain, do not rub. The use of solvents, bleaches or other chemical detergents should be strictly avoided, as they could alter the aesthetic and physical characteristics of the product.

Wool: Use the vacuum cleaner regularly with a smooth nozzle, without brushing or scrubbing in any way. The use of solvents, bleaches or other chemical detergents should be strictly avoided, as they could alter the aesthetic and physical characteristics of the product.

Warnings: Some upholstery (leather, imitation leather, weft fabrics) may have a slightly different aesthetic result depending on the batch, the dyeing bath and the product to be made. In particular, the leather used for the upholstery of sofas and armchairs is a material of natural origin so any small imperfections are not to be considered defects. The leather upholstery, with use, can change appearance and texture over time, this is to be considered normal.

UNPADDED PARTS

Care instructions:

Mesh: Use the vacuum cleaner regularly with a smooth spout, without brushing or scrubbing in any way. Any stains can be removed using a cloth dampened with water and neutral soap with regular circular movements. The use of solvents, bleaches or other chemical detergents should be strictly avoided, as they could alter the aesthetic and physical characteristics of the product.

Exposed wood: Clean using a dry cotton cloth to remove any dust residue or minor impurities. Do not use wet or damp cloths. To avoid unsightly scratches, do not use abrasive cloths, chemicals or powder cleaners that may damage the paintwork. avoid the use of solvents, bleaches or other chemical detergents, as they could alter the

aesthetic and physical characteristics of the product. Wooden surfaces, being a natural material themselves, may undergo colour alterations with use and over time.

Plastic: Plastic surfaces should generally be cleaned with a damp and soft cloth soaked in water, it is not recommended to use dry cloths that could load with rubbing electrostatically the plastic surface by attracting dust. For more stubborn stains, neutral liquid soap can be diluted in water in moderation. The use of solvents, bleaches or other chemical detergents should be strictly avoided, as they could alter the aesthetic and physical characteristics of the product. Avoid all abrasive substances such as washing powders, abrasive pastes, scouring pads or rough sponges. Avoid dragging objects that can scratch the material on surfaces.

PAINTED / CHROME-PLATED METAL BASES AND STRUCTURES

Maintenance and cleaning instructions: Both steel or aluminum metal surfaces and painted surfaces should be cleaned with a damp, soft cloth soaked in warm water; For more stubborn stains, it is possible to dilute neutral liquid soap in water, in moderation. Always dry after cleaning with a soft cloth or chamois skin. Do not use creams and pastes suitable for cleaning steel ovens, do not use chlorine, do not use bleach and other aggressive detergents. It is not recommended to use abrasive pastes, scouring pads and scouring pads that can scratch metal surfaces. Avoid contact with floor cleaners containing corrosive solvents such as but not limited to muriatic acid, ammonia, rubbing alcohol, bleach, sulphuric acid, soda, etc.

CASTORS

Tips: When using the chair on tiled floors, carpets or rugs, we recommend the use of polyamide castors. For stone, wood, laminate floors, we recommend the use of soft desmopan rubber castors. Maintenance and cleaning instructions: It is advisable to clean the castors periodically to avoid the accumulation of dirt that can cause malfunction. Warnings: Do not stress the sliding of the castors on floors with pronounced joints as the difference in height can cause them to break.